

## K38 - User's Quick Reference Guide

### KEYPAD OVERVIEW

**TX**

Fast Flash = Communication with panel in progress

**StayD**

On = StayD enabled  
Off = StayD disabled

**Zone Status**

**Keys**



= Press once + [MASTER CODE] for Quick Menu programming




= Press & hold for keypad settings



= Press & hold for chime programming

**Partition Status**

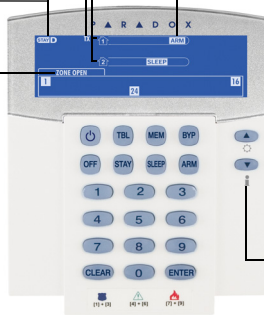

**Arm / Sleep / Stay:**

On = Partition armed  
Off = Partition disarmed  
Flash = Exit Delay  
Fast Flash† = Exit Delay (final 10 sec.)  
Fast Flash† = Partition in alarm

**†Audible Indicators:**

Continuous beep = Alarm  
Variable beep = Fire alarm  
Intermittent beep = Beginning of exit delay  
Fast beep = Final 10 sec. of exit delay

**Info:**

Refresh display to see all open zones

**Zone Display:**

Numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

**[TBL] Trouble display**

On = Trouble(s) occurring

**[MEM] Alarm memory display**

On = Alarm(s) occurred

**[BYP] Bypass programming**

On = Zone(s) bypassed

### ARMING AND DISARMING

**TO ARM  
WHEN LEAVING...**



**To Regular Arm:**

1. Close all zones in the desired partition.
2. Enter your [ACCESS CODE]‡ or [ARM] + [ACCESS CODE]

**TO ARM  
WHEN STAYING...**



**To Stay Arm:**

1. Press the [STAY] key.
2. Enter your [ACCESS CODE]‡.

**To Sleep Arm:**

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE]‡.

**To Disarm:**

[OFF] + [ACCESS CODE]‡

‡ If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

## PANIC ALARMS

To send a silent or audible alarm to your monitoring station, press and hold one of the following combinations for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [6]
Fire	Press [7] & [9]

## ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the [MEM] key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will appear on the screen.
4. To exit, press [CLEAR].

## TROUBLE DISPLAY

1. Press the [TBL] key. The word 'Trouble' and the number(s) corresponding to the trouble(s) are displayed on the screen.
2. Read the corresponding explanation of the trouble from the trouble list in the MG/SP User Guide. If no repair instructions are given, call your security company for repairs.
3. To exit, press [CLEAR].

## KEYPAD SETTINGS

To mute the keypad:

Press and hold the [CLEAR] key for 10 seconds to enable or disable Keypad Muting.

To adjust the backlight level:

1. Press and hold the [▲] key for 4 seconds.
2. Keys [1] and [2] flash.
3. Press [1], then use the [▲] and [▼] to adjust.
4. To save and exit, press [CLEAR] or [ENTER].

To adjust the backlight delay:

1. Press and hold the [▲] key for 4 seconds.
2. Keys [1] and [2] will flash.
3. Press [2], then use the [▲] and [▼] to adjust.
4. To save and exit, press [ENTER].

## BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the [BYP] key.
2. Enter your [ACCESS CODE].
3. The corresponding zone number will be displayed on the screen when open. Select the zone(s) you want to bypass by entering the two-digit zone number. For example, to enter zone 3, enter [0] then [3]. The corresponding zone indicator will flash.
4. To save and exit, press [ENTER].

## CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the [🔔] key. The word 'Chime' appears on the screen.
2. Select the zones you want to Chime by entering the two-digit zone number. The corresponding zone number flashes. For example, to chime zone 2 enter [0] then [2]. The keypad automatically saves once the 2-digit zone number is entered.
3. To save and exit, press [ENTER].

### Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on [www.paradox.com/terms](http://www.paradox.com/terms). Your use of the Paradox product signifies your acceptance of all warranty terms and conditions.

### Patents

US, Canadian and international patents may apply. Paradox is a trademark or registered trademark of Paradox Security Systems (Bahamas) Ltd.  
© 2022 Paradox Security Systems Ltd.