

K38 - User's Quick Reference Guide

KEYPAD OVERVIEW

TX


Fast Flash = Communication with panel in progress


StayD


On = StayD enabled
Off = StayD disabled

Zone Status

Keys

 = Press once + [MASTER CODE] for Quick Menu programming

 = Press & hold for keypad settings

 = Press & hold for chime programming

Zone Display:

Numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

Partition Status



Arm / Sleep / Stay:

On = Partition armed
Off = Partition disarmed
Flash = Exit Delay
Fast Flash† = Exit Delay (final 10 sec.)
Fast Flash† = Partition in alarm

†Audible Indicators:

Continuous beep = Alarm
Variable beep = Fire alarm
Intermittent beep = Beginning of exit delay
Fast beep = Final 10 sec. of exit delay

Info:

Refresh display to see all open zones

[TBL] Trouble display

On = Trouble(s) occurring

[MEM] Alarm memory display

On = Alarm(s) occurred

[BYP] Bypass programming

On = Zone(s) bypassed

ARMING AND DISARMING

TO ARM WHEN LEAVING...



To Regular Arm:

1. Close all zones in the desired partition.
2. Enter your [ACCESS CODE]‡ or [ARM] + [ACCESS CODE]

TO ARM WHEN STAYING...



To Stay Arm:

1. Press the [STAY] key.
2. Enter your [ACCESS CODE]‡.

To Sleep Arm:

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE]‡.

To Disarm:

[OFF] + [ACCESS CODE]‡

‡ If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

PANIC ALARMS

To send a silent or audible alarm to your monitoring station, press and hold one of the following combinations for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [6]
Fire	Press [7] & [9]

ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will appear on the screen.
4. To exit, press **[CLEAR]**.

TROUBLE DISPLAY

1. Press the **[TBL]** key. The word 'Trouble' and the number(s) corresponding to the trouble(s) are displayed on the screen.
2. Read the corresponding explanation of the trouble from the trouble list in the MG/SP User Guide. If no repair instructions are given, call your security company for repairs.
3. To exit, press **[CLEAR]**.

KEYPAD SETTINGS

To mute the keypad:

Press and hold the **[CLEAR]** key for 10 seconds to enable or disable Keypad Muting.

To adjust the backlight level:

1. Press and hold the **[▲]** key for 4 seconds.
2. Keys [1] and [2] flash.
3. Press [1], then use the **[▲]** and **[▼]** to adjust.
4. To save and exit, press **[CLEAR]** or **[ENTER]**.

To adjust the backlight delay:

1. Press and hold the **[▲]** key for 4 seconds.
2. Keys [1] and [2] will flash.
3. Press [2], then use the **[▲]** and **[▼]** to adjust.
4. To save and exit, press **[ENTER]**.

BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]**.
3. The corresponding zone number will be displayed on the screen when open. Select the zone(s) you want to bypass by entering the two-digit zone number. For example, to enter zone 3, enter **[0]** then **[3]**. The corresponding zone indicator will flash.
4. To save and exit, press **[ENTER]**.

CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the **[]** key. The word 'Chime' appears on the screen.
2. Select the zones you want to Chime by entering the two-digit zone number. The corresponding zone number flashes. For example, to chime zone 2 enter **[0]** then **[2]**. The keypad automatically saves once the 2-digit zone number is entered.
3. To save and exit, press **[ENTER]**.

Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on www.paradox.com/terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions.

Patents

US, Canadian and international patents may apply. Paradox is a trademark or registered trademark of Paradox Security Systems (Bahamas) Ltd.

© 2022 Paradox Security Systems Ltd.